


Lifeloc

Professional Breath Alcohol Tester

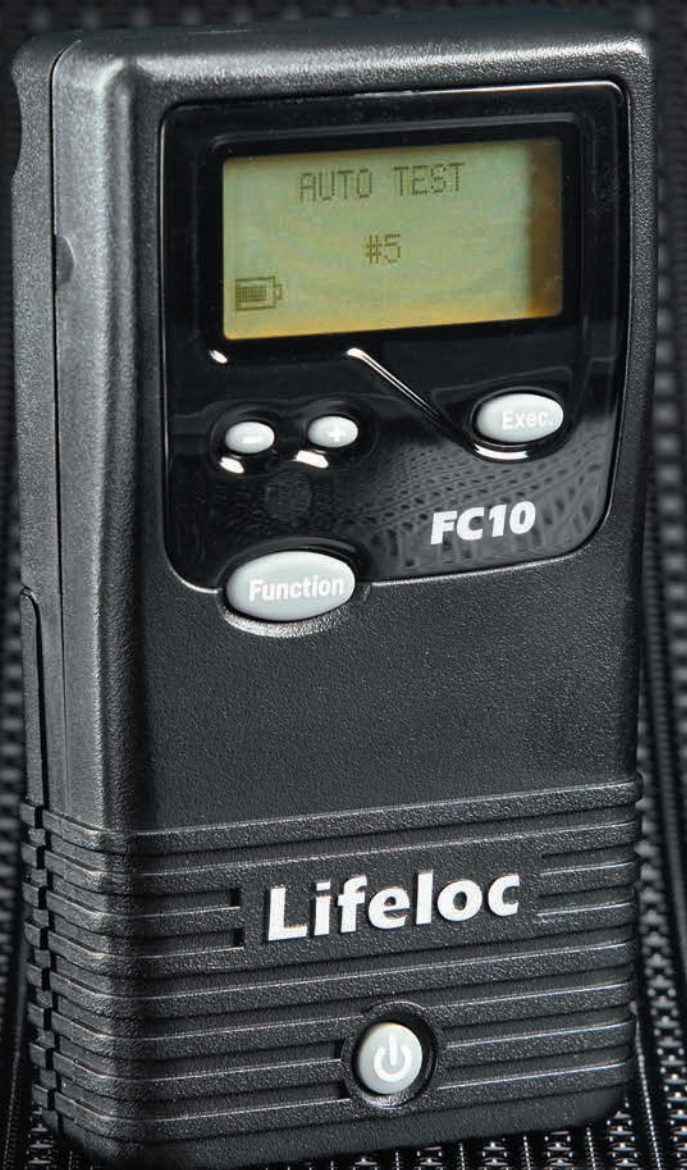

Unlock the power of the FC10 portable breath alcohol tester, a precision instrument providing you with the fastest most reliable results.

Lifeloc FC10

Professional Breath Alcohol Tester

Unlock the Power
of Alcohol Testing

Product Innovation

- Menu Driven Software
 - Easily guides users through the testing process
- Last Test Recall
- Visual & Audible Cues
 - Displays Breath Flow & Alcohol Curve
 - Audible prompts to ensure proper test taking
- Breath Pressure Sensor
 - Test will not activate until subject begins blowing
 - Additional security against an uncooperative subject

Precision Instrument

- Platinum Fuel Cell Sensor
 - Superior accuracy and long life
 - Alcohol specific
- Double Pump Sampling System
 - Unsurpassed Passive Testing
 - Perfect for open containers
 - Rapid multiple subject testing
- Rapid & Repeatable Test Taking
 - Immediate response on negative, <10 seconds on positive
 - Immediate recovery on negative, <30 seconds on positives
- Best in Class Operating Temperature
 - 0-55°C or 32-130°F

Ease of Use

- User Selectable Test Modes
 - Auto, Manual and Passive options
 - Passive can be turned on or off
- Dual Trigger Modes
 - End of Breath: test taken at end of breath sample
 - Precise Volume: test taken after detecting 1.5L of breath
- Large Backlit LCD Display
 - Excellent day or night visibility
 - Full 64 character display
 - Easy to understand prompts with full text alerts
 - Power saving Auto Shut-off
- Sturdy & Rugged Design
 - Optional rubber grip protects the unit from damage
 - Fits securely in your hand, small enough to fit in a shirt pocket
 - Heavy duty components and rugged case
- Long Battery Life
 - 160 hours of "on time" or up to 6000 tests
 - 4AA Alkaline or NiMH rechargeable batteries

Five Star Customer Care

- Live, Onsite Technical Support
- Fastest Repairs in the Industry
 - 5 days or less for up to 5 units or it's free
- Comprehensive Service Packages
 - Gold, Silver & Platinum packages offer a full spectrum of services and warranties
- Exceptional Value
 - Tiered products and pricing for every budget
 - Volume Discounts
- Training Solutions & Supplies
 - Comprehensive Training Packages
 - Calibration Equipment
 - Unit Supplies and Accessories
- Manufactured & Serviced Responsibly in USA

